

# Mandrino Steel Dryfix 8

Patented driver attachment for installation of Steel Dryfix 8 stainless steel helical bars.

Driver attachment with coupling for SDS Plus percussion or hammer drill, essential for dry installation of Steel Steel Dryfix 8 bars.



1. Patented
2. Essential for installing Steel Dryfix 8 bars
3. Easy to use

## Areas of application

### → Intended use:

The use of the Steel Dryfix 8 Driver attachment is necessary for the installation of the Steel Dryfix 8 bars as a system for:

- Connecting wall panels, in cases in which the teeth are not attached together well
- Break-fill work of damaged or cracked architraves
- Break-fill work at the soffit of masonry arches
- Break-fill work of decorative stone which

- decorates the structure at the back
- Connection of wooden beam heads to the masonry support
- Break-fill work of cracks in the masonry structure, made of brick, raw earth, tuff
- Binding for coating facades
- Limitation of the crack
- Seismic improvement of walls with emerging inner debonding/collapse of parts of the masonry

## Instructions for use

### → Preparation of substrates

Before piling the bar, make a pilot bore with a diameter smaller than the diameter of the Steel Dryfix 8 bar, depending on the consistency of the substrate. In general, pilot bores of two diameters smaller than the diameter of the Steel Dryfix 8 helical bar are indicated (four diameters smaller in case of soft substrates or one diameter smaller on compact substrates), using a roto-percussion drill.

Do not use the Steel Dryfix 8 helical bar for making the pilot bore.

In the case of masonry, the Steel Dryfix 8 bars can be installed either through the brick or inside the mortar joint. If the bar is installed in the mortar joint it is advisable to apply it inclined to intercept the brick in depth.

### → Preparation

The Steel Dryfix 8 Driver attachment must be installed on drills or percussion hammers with SDS Plus coupling, excluding rotation.

### → IPiling the bar

While installing the bar, keep the drill, the driver attachment and the Steel Dryfix 8 bar in the same direction. Avoid inclinations between the Steel Dryfix 8 bar and the driver attachment. In addition, keep one hand on the driver attachment.

 
To prevent misalignments of the Steel Dryfix 8 bar, to avoid damaging the driver attachment and to optimize the performance of the piling, use drills or percussion hammers, excluding rotation.

## Warning

- Product for professional use
- abide by any standards and national regulations
- when handling the material wear protective clothing and goggles, and follow the instructions regarding methods for applying the material
- avoid overheating of the driver attachment
- contact with the skin: no special measures required
- storage on the work site: store under cover in a

dry place, well away from substances that might damage it

- the product is an item according to the definitions of the EC Regulation No. 1907/2006 and therefore does not require a Safety Data Sheet
- for any other issues, contact the Kerakoll Worldwide Global Service +39 0536 811 516 - [globalservice@kerakoll.com](mailto:globalservice@kerakoll.com)



The Rating classifications refer to the GreenBuilding Rating Manual 2013. This information was last updated in December 2022; please note that additions and/or amendments to this information may be made over time by KERAKOLL Spa; for the latest version, see [www.kerakoll.com](http://www.kerakoll.com). KERAKOLL Spa shall therefore be liable for the validity, accuracy and updating of information provided only when taken directly from its institutional website. The technical data sheet given here is based on our technical and practical knowledge. As it is not possible for us to directly check the conditions in your building site and the execution of the work, this information represents general indications that do not bind Kerakoll in any way. Therefore, it is advisable to perform a preliminary test to verify the suitability of the product for your purposes.